



Carving Instructions




1 Cut out Bottom



2 Clean & Scrape*



3 Attach Pattern*

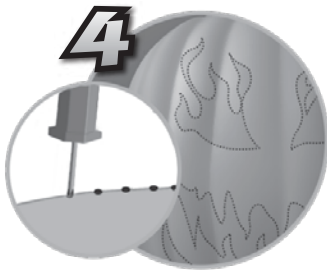


4 Transfer Pattern*



5 Carve Design

Using the screwdriver, poke a hole in your pumpkin. Insert the blade tip, and then press the trigger to turn on. Saw along the design using gentle pressure. Do not force the saw through the pumpkin. Remove and re-insert the blade with the power off to make corners. Release the trigger to power off.

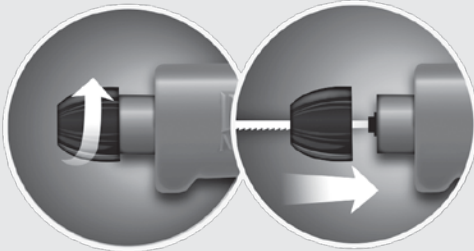

To Insert/Change Blades:

Twist collar counter-clockwise and pull to remove from base. Insert blade, replace collar and turn clockwise to tighten.



To Install/Replace Batteries:

Using the screwdriver, remove battery cover and dispose of old batteries properly. As a simultaneous set, insert new batteries, noting correct polarity. Replace cover and screw.

Do not mix old and new batteries. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel cadmium) batteries. Remove batteries when not in use.

To clean the Power Saw handle, wipe with a damp cloth.

DO NOT IMMERSE HANDLE IN WATER!

CAUTION: Choking Hazard. May contain small parts.

Not for children under 3 years of age.

CAUTION: THIS IS NOT A TOY. The tools contained within may be sharp. USER ASSUMES ALL RISKS OF INJURY. Adult supervision required. Store all tools away from children. Not for food use.

*Scrapper Scoop™ and patterns sold separately at retail outlets.
©Signature Brands, LLC. All rights reserved.